
OPTICAL

SYSTEMS

DESIGN

OPERATOR MANUAL

OSD1200 SERIES

INDUSTRIAL MODEMS

OSD1202 – SQUARE D SYNET MODEM

OPTICAL SYSTEMS DESIGN

OSD1200 SERIES

INDUSTRIAL MODEMS

OSD1202 – SQUARE D SYNET MODEM

Document No. 101056 Rev. 02

OPTICAL SYSTEMS DESIGN

INDEX 1

1	<u>TECHNICAL SUMMARY</u>	4
1.1	<u>DESCRIPTION</u>	4
1.2	<u>BASIC OPERATION</u>	4
1.3	<u>SPECIFICATIONS</u>	5
2	<u>INSTALLATION AND OPERATING INSTRUCTIONS</u>	6
2.1	<u>MOUNTING</u>	6
2.2	<u>POWER CONNECTION</u>	6
2.3	<u>SIGNAL CONNECTION</u>	6
2.4	<u>DIP SWITCHES</u>	6
2.5	<u>FIBER OPTIC CABLE CONNECTION</u>	6
2.6	<u>OPTICAL POWER LEVEL</u>	6
2.7	<u>INDICATOR LIGHTS</u>	7
2.8	<u>BUILT IN TEST MODE</u>	7
2.8.1	<u>LINK TEST CONFIGURATION</u>	7
2.8.2	<u>LIGHT SOURCE CONFIGURATION</u>	7
3	<u>MAINTENANCE</u>	9
3.1	<u>EXTERNAL INSPECTION</u>	9
3.2	<u>ROUTINE MAINTENANCE</u>	9
4	<u>WARRANTY</u>	10
4.1	<u>WARRANTY PERIOD</u>	10
4.2	<u>REPAIRS</u>	10
4.2.1	<u>WARRANTY REPAIRS</u>	10
4.2.2	<u>OUT-OF-WARRANTY REPAIRS</u>	10
4.2.3	<u>SITE REPAIRS</u>	10
4.2.4	<u>EXCLUSIONS</u>	10
	FIGURE 2-1 OSD1202 FRONT PANEL	8
	FIGURE 2-2 OSD1202 REAR PANEL	8
	TABLE 1 OPTICAL POWER SWITCH SETTINGS	7
	TABLE 2 INDICATOR LIGHTS	7

1 TECHNICAL SUMMARY

1.1 DESCRIPTION

The OSD1202 is a fiber optic modem compatible with the Square D Synet bus. It allows for normal point-to-point and optional multidrop operation over common optical fiber sizes. The unit is 240VAC powered and industrially packaged in a stand alone unit. It offers LED status indicators for easy visual inspection and a built in test mode for testing link integrity. The standard unit is capable of extending existing links to 5km over multimode fiber while still driving up to 500 metres of suitable twisted pair cable.

1.2 BASIC OPERATION

The OSD1202 receives and transmits its electrical signals to attached equipment via a triaxial connector.

The optical interface is via ST connectors on the rear of the modem. There are 2 (4 if the repeater module is installed) connectors, one for optical output and one for optical input.

The test function is activated through a DIP switch recessed in the rear panel.

Status indicators are all situated on the front panel.

OPTICAL SYSTEMS DESIGN

1.3 SPECIFICATIONS

Electrical

Compatibility	Square D Synet LAN products
Data Rate and Mode	62.5 to 500kbaud, half duplex
Connector	Triaxial socket
Maximum Twisted Pair Cable Length	500 metres

Optical

Coupled Transmitted Power	>-23dBm (5iW) average into 50/125im .2NA GI fiber >-19dBm (12iW) average into 62.5/125im .29NA GI fiber
Power Adjust Range HI/LOW	10dBm nominal
Receiver Sensitivity	<-40dBm (100nW) average for 1×10^{-9} BER
Optical Wavelength	850 ± 40 nm
Optical Connector	Type ST standard - Others optional

Physical

Power Requirements	100 to 120VAC or 200 to 260VAC at 5VA maximum
Dimensions (mm)	215W x 210D x 55H Free standing, a 19" rack mounting adapter is available
Operating Temperature	0 to 60°C
Relative Humidity	0 to 95% non-condensing
Weight	1.4kg

2 INSTALLATION AND OPERATING INSTRUCTIONS

This section briefly outlines the steps required to install and operate the OSD1202 successfully. It should be studied carefully to avoid undue damage to the equipment and poor operation.

This equipment has been fully tested before dispatch and is ready for immediate operation. However, it is advisable to check for external transportation damage before operation. If damage is present, return the unit and packing to the supplier immediately.

2.1 MOUNTING

The unit is designed to rest on a flat surface such as a modem tray or bench top. Two units fit side by side on a 19" rack shelf. No mounting brackets are supplied.

2.2 POWER CONNECTION

Units are powered by 100-120VAC or 200-260 VAC via an IEC socket on the rear of the modem. Connect up the power but do not power up till remaining connections have been made. An On/Off switch is positioned next to the power socket.

2.3 SIGNAL CONNECTION

Refer to Figure 2-2 for the terminal pin out. Data +, Data - and Cable Shield are supported via a triaxial connector. Note: The OSD1202 is not internally terminated therefore external terminations must be used in the system.

2.4 DIP SWITCHES

The DIP switches should be in the up position for normal operation. The down position is for test mode. For a more detailed explanation refer to Section 2.8 "Built In Test Mode".

2.5 FIBER OPTIC CABLE CONNECTION

The OSD1202 supports all commonly available multimode optical fibers with ST connectors. Remove the protective caps from the optical output and optical input ports.

Before inserting the optical connectors ensure they are free from any contamination. If they need cleaning use alcohol and lint free tissues. Connect the already terminated cables to the output/input ports. Ensure that the optical output port of one OSD1202 connects to the optical input port of an OSD1202 at the other end.

2.6 OPTICAL POWER LEVEL

The optical power level has 2 user selectable settings. The switch between the optical connectors on the rear panel selects the desired level. The settings are high/low power. Table 1 should be used as a guide as to which setting to select. A separate switch exists for each fiber optic module if the repeater option is installed.

OPTICAL SYSTEMS DESIGN

TABLE 1 OPTICAL POWER SWITCH SETTINGS

FIBER TYPE	HIGH	LOW
50/125 μ m	2 to 5km	0 to 3km
62.5/125 μ m	2 to 5km	0 to 3km

2.7 INDICATOR LIGHTS

Refer to Figure 2-1

TABLE 2 INDICATOR LIGHTS

"Power" LED (green)	Indicates power supplied to the unit.
"TX" LED (yellow)	Indicates data being transmitted out the optical output
PORT 1 or PORT 2	
"Mode" LED (green)	Constantly on indicates normal operation mode. Flashing on/off at the rate of approximately 1sec indicates test mode.
"RX" LED (yellow)	Indicates receiving data on the optical input port.

2.8 BUILT IN TEST MODE

The built in test mode transmits a constant square wave onto the fiber optic link. In this mode the modem can be used as a light source in conjunction with a power meter to obtain loss measurements of the link or self testing of link integrity.

The test mode is selected by the DIP switches recessed in the rear panel. See Figure 2-2.

2.8.1 LINK TEST CONFIGURATION

When the modem at the other end of the link is also in test mode the RX indicator can be used to determine the integrity of the link. The "RX" indicator on the modem will reflect the state of the link. If it does not illuminate then the optical receiver is not receiving sufficient power for link integrity.

2.8.2 LIGHT SOURCE CONFIGURATION

To use the modem as a light source select the channel to be used and switch it to test mode. Be sure not to have any active system connected at the other end of the fiber. The test mode will jam up a network. The optical output of the OSD1202 is now transmitting a constant output. This can be used to calibrate a power meter. An accurate measurement of the optical link loss can be made by then connecting the optical cable and measuring the optical power at the remote end.

OPTICAL SYSTEMS DESIGN

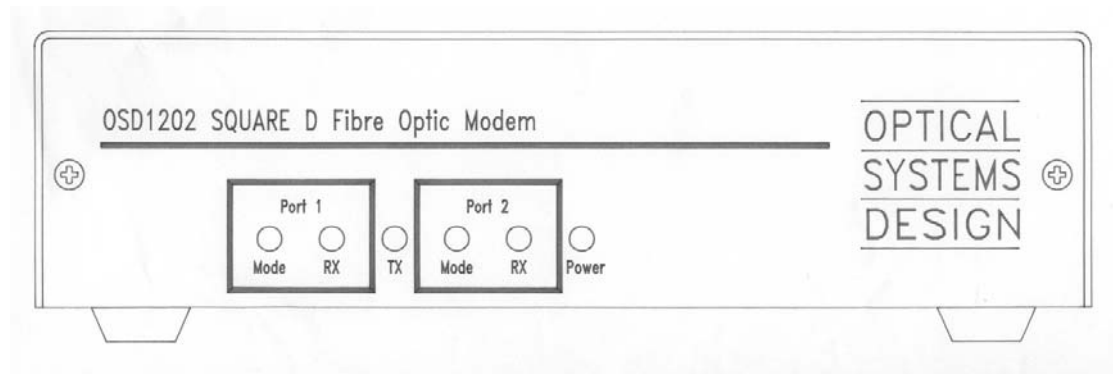


Figure 2-1 OSD1202 Front Panel

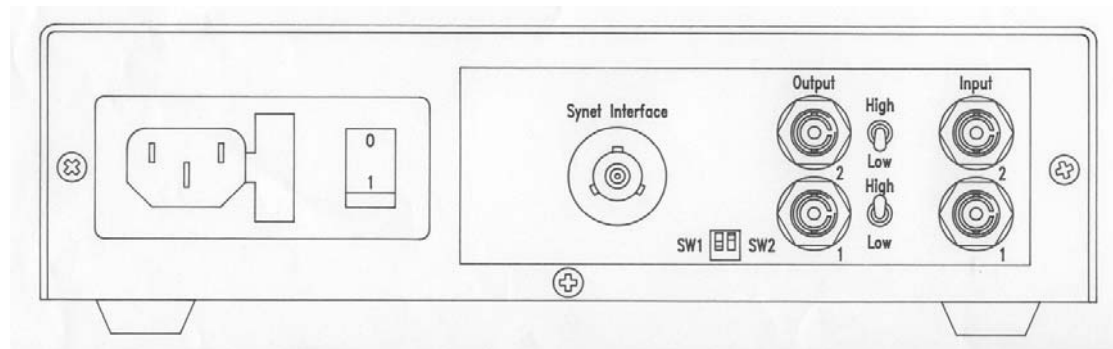


Figure 2.2 OSD1202 Rear Panel

3 MAINTENANCE

The following section briefly outlines the fault-finding procedures for the OSD1202 modem. Please take note of the following:

Personnel without considerable technical training should not attempt any maintenance other than that outlined below.

If further maintenance is attempted you are warned that every care should be taken to ensure that internal measurements made while the equipment is running are taken carefully, as some of the components are extremely expensive and can be damaged by failure of any part of their support circuitry.

3.1 EXTERNAL INSPECTION

Visually check the following:

Check that the power leads are correctly terminated and that the correct power source has been selected.

Check that the Square D Synet has been correctly terminated.

Check that the status LEDs illuminate properly.

Check that the correct optical power level has been selected.

Inspect the optical connectors and give them a clean before reinsertion.

3.2 ROUTINE MAINTENANCE

No routine maintenance is required for this equipment.

4 WARRANTY

Thank you for purchasing equipment designed, manufactured and serviced by Optical Systems Design (OSD). OSD warrants that at the time of shipment, its products are free from defects in material and workmanship and conforms to specifications. Our Warranty conditions are outlined below:

4.1 WARRANTY PERIOD

For warranty period, please call your local OSD distributor.

4.2 REPAIRS

Optical Systems Design reserves the right to repair or replace faulty modules/units. Please obtain a "Return Material Authorization" (RMA) form and number before returning goods. Goods must be returned in adequate packing material to Optical Systems Design, Warriewood or its nominated authorized representative, for all repairs.

4.2.1 WARRANTY REPAIRS

Return shipments to OSD shall be at customer's expense and freight back to the customer will be at OSD expense.

4.2.2 OUT-OF-WARRANTY REPAIRS

OSD reserves the right to repair or replace any faulty goods. Freight costs and insurance for both journeys are met by the user. All equipment repaired by OSD will have a 3-month warranty from the date of dispatch.

4.2.3 SITE REPAIRS

By agreement site repairs may be undertaken for which out of pocket, hotel and travel expenses will be charged.

4.2.4 EXCLUSIONS

This warranty does not apply to defects caused by unauthorized modifications, misuse, abuse or transport damage to the equipment. All modifications to OSD's standard product will need written authorization and will be charged at normal repair rates. All modifications are to be carried out by OSD Technicians. Warranty is void if unauthorized removal and/or tampering with serial number and/or repair labels is evident.

Optical Systems Design Pty. Ltd.
7/1 Vuko Pl. Warriewood 2102
P.O. Box 891 Mona Vale
N.S.W. Australia 2103
Telephone: +61 2 9913 8540
Facsimile: +61 2 9913 8735
Email: osdsales@osd.com.au
Web Site: www.osd.com.au

OPTICAL
SYSTEMS
DESIGN

PTY LTD

A.B.N. 83 003 020 504

Printed in Australia